


Installation of pre-hung shutters

1. Assemble the frame
2. Pre-drill holes 1/8" in diameter at each hinge location (in the light stop) on the vertical frame pieces and as needed on the horizontal pieces.
3. If size allows, place panels in the assembled frames
4. Set the frame in the window, after leveling the sill or header secure hinge side, starting with the top hinge of the opening with a square drive trim screw ***see drawings below for penetration point and screw size***
5. Place panels in the frames (if not done at step 3)
6. Close panels to check fit and see if any shimming and adjusting is necessary
7. Complete fastening unit in opening, hinge side first, then magnet side - taking care to keep frame legs straight
8. Adjust frame for square - note the diagram below
9. Cover screw holes with putty or screw caps. Use touch up paint to blend when needed.

PENETRATION POINTS FOR KIRTZ FRAMES

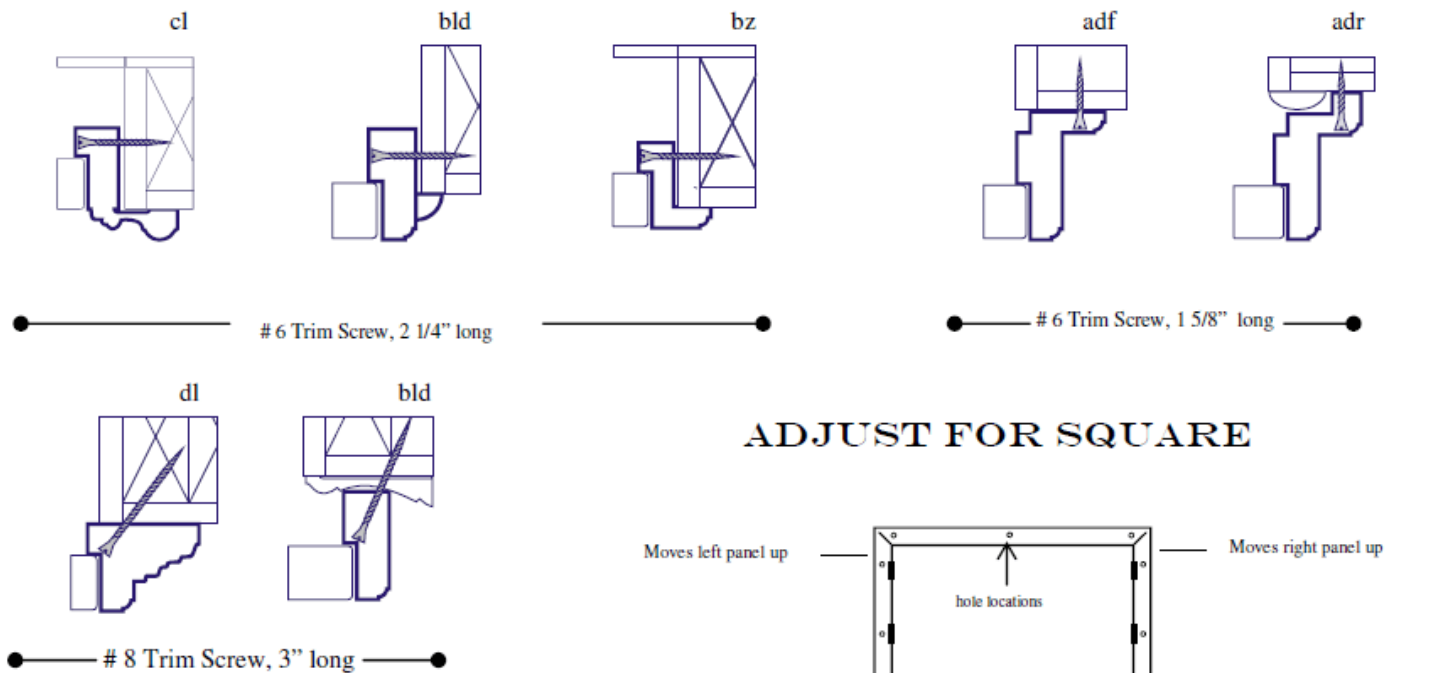

ADJUST FOR SQUARE

