
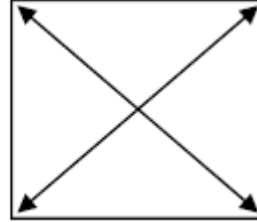


Window Size Measurements

SMI recommends window size measurements for INSIDE MOUNT ONLY

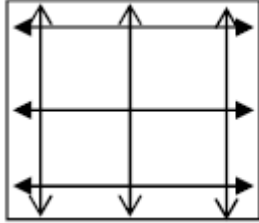

INSIDE MOUNT

1. Measure window depth for louver clearance
2. Measure inside WIDTH in three places (top, middle, bottom) record the *smallest* measurement
3. Measure inside HEIGHT in three places (left, middle, right), record the *smallest* measurement
4. Check for square by measuring on the diagonal. If diagonals differ by more than 1/2" SMI recommends recording a smaller measurement. Call your customer service representative for help.

Framed Openings: SMI will build unit 1/4" less than recorded measurements for width and height

Unframed Openings: SMI will build unit 3/16" less than recorded measurement for width and height

OUTSIDE MOUNT

NA - See [ODF Measurements](#)